

Multi-Mette

Owner's manual





Machine's maintenance and greasing



Greasing
twice a week

The spur gear gap
have to be 0 mm

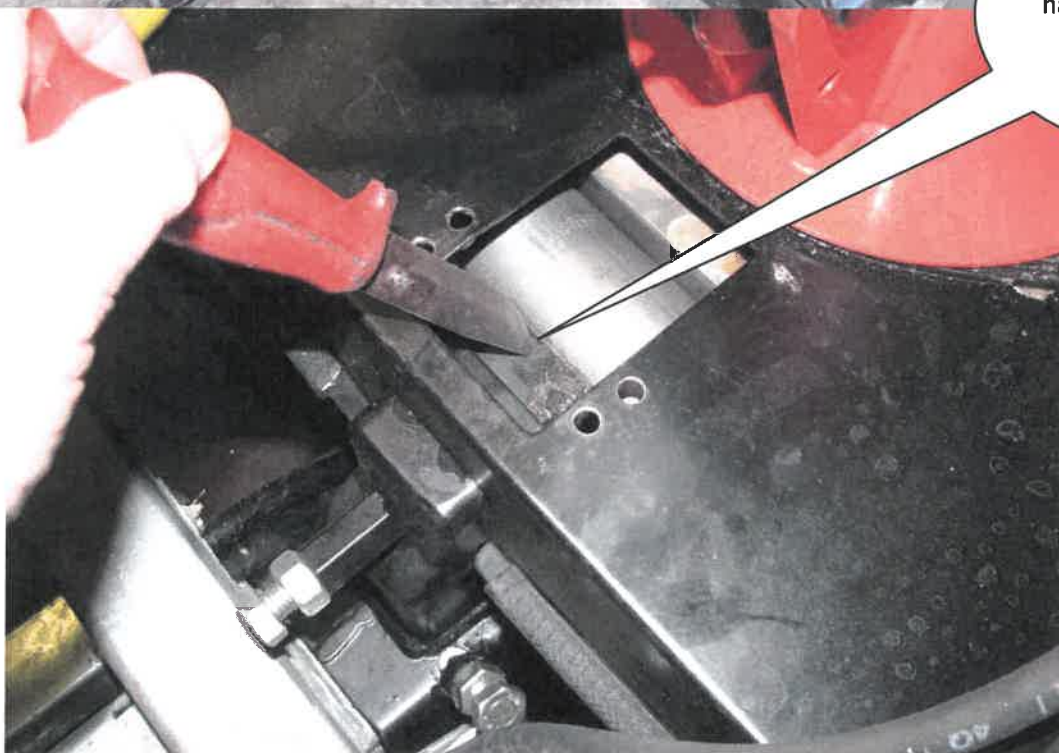


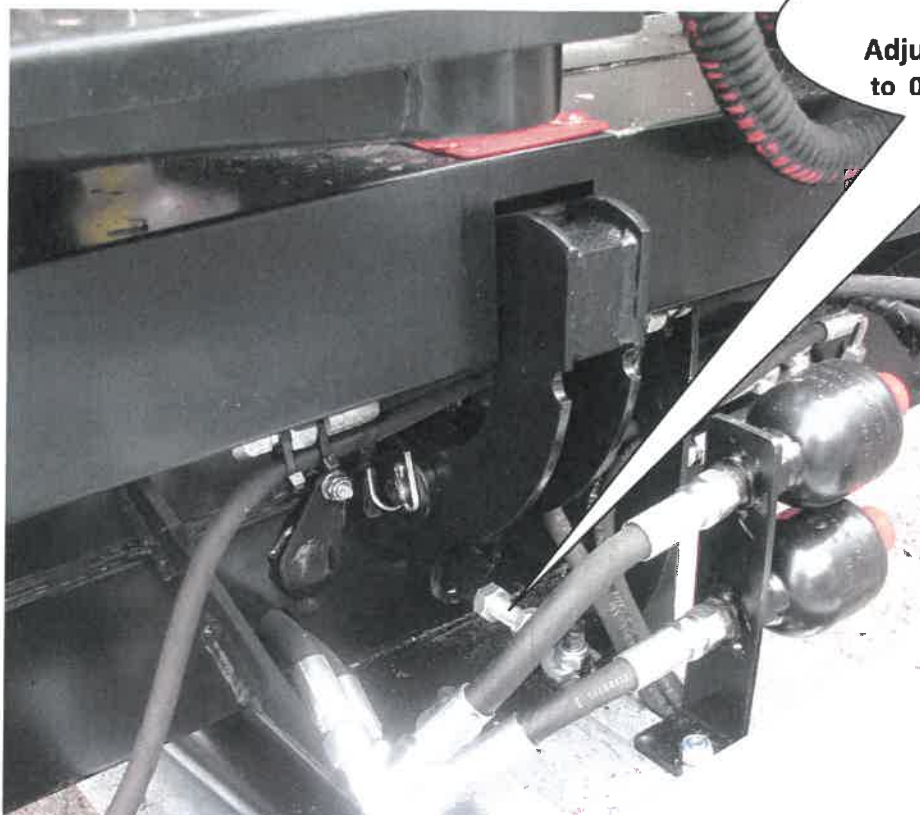

Adjust The spur gear gap
to 0 mm

Three times a week



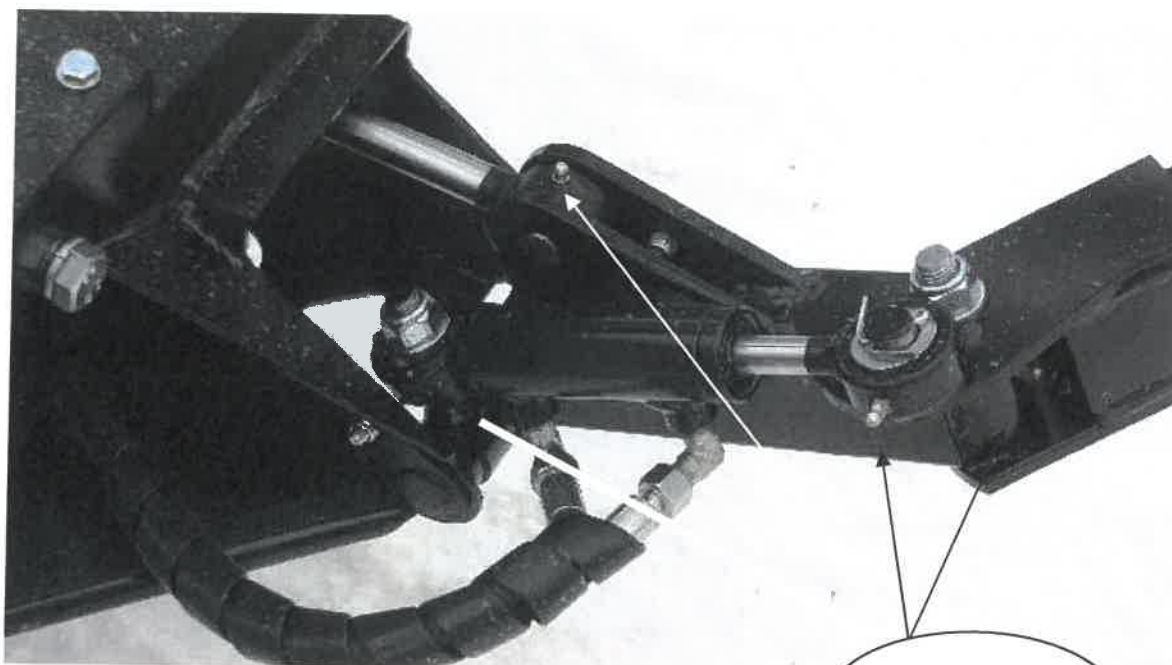

Weekly


Greasing
twice a week




MULTIMETTE 4.2 E ja 4.5 E service



Take care of Vaseline

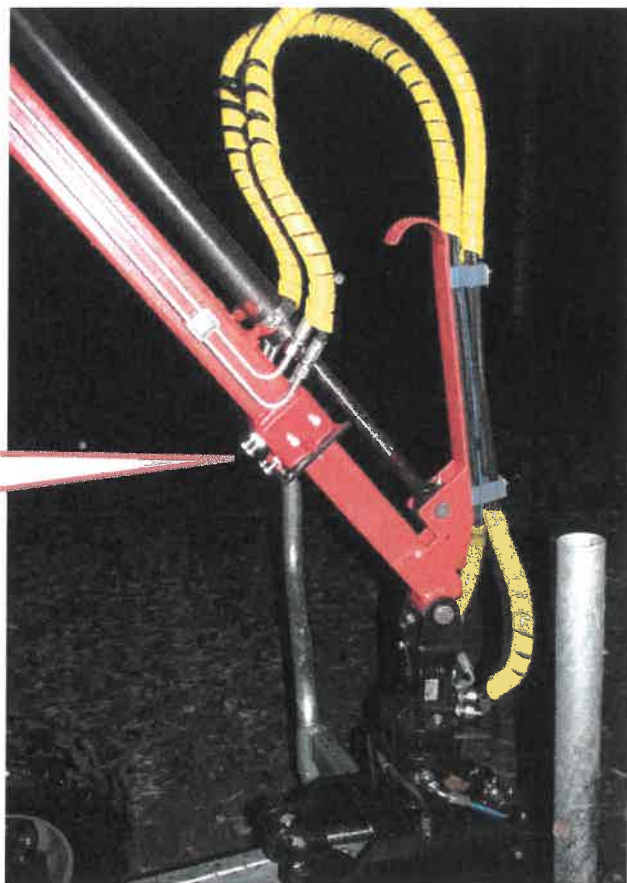


The clearance removed by
adjusting screws.


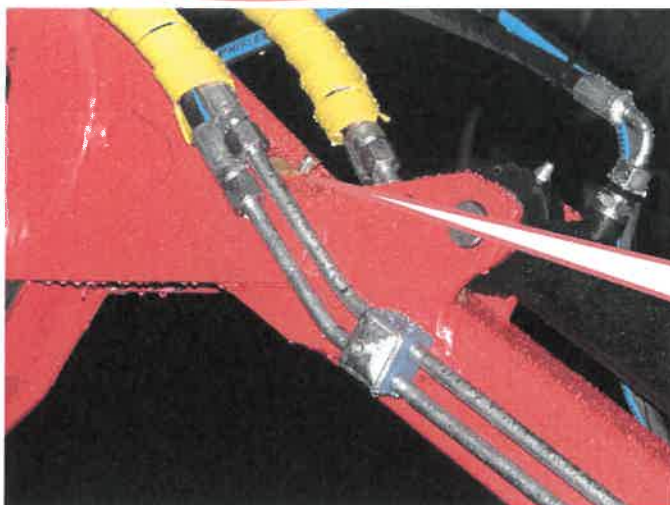


Greasing twice a week

The maintenance and greasing for the grap.

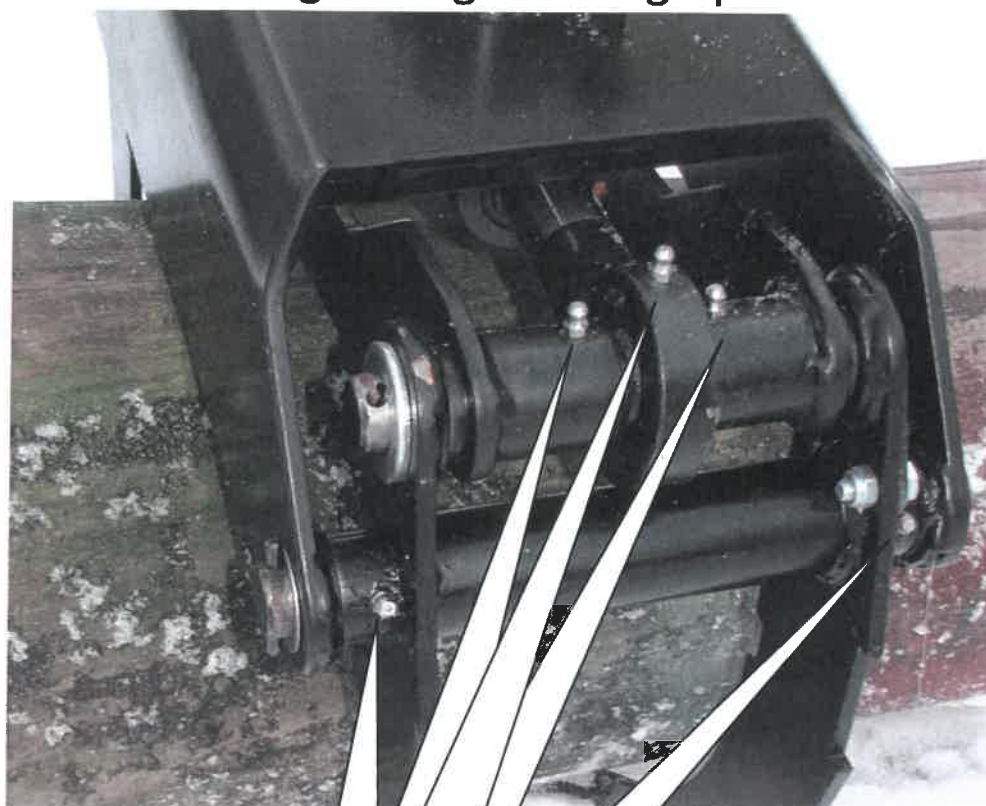

Greasing twice a week

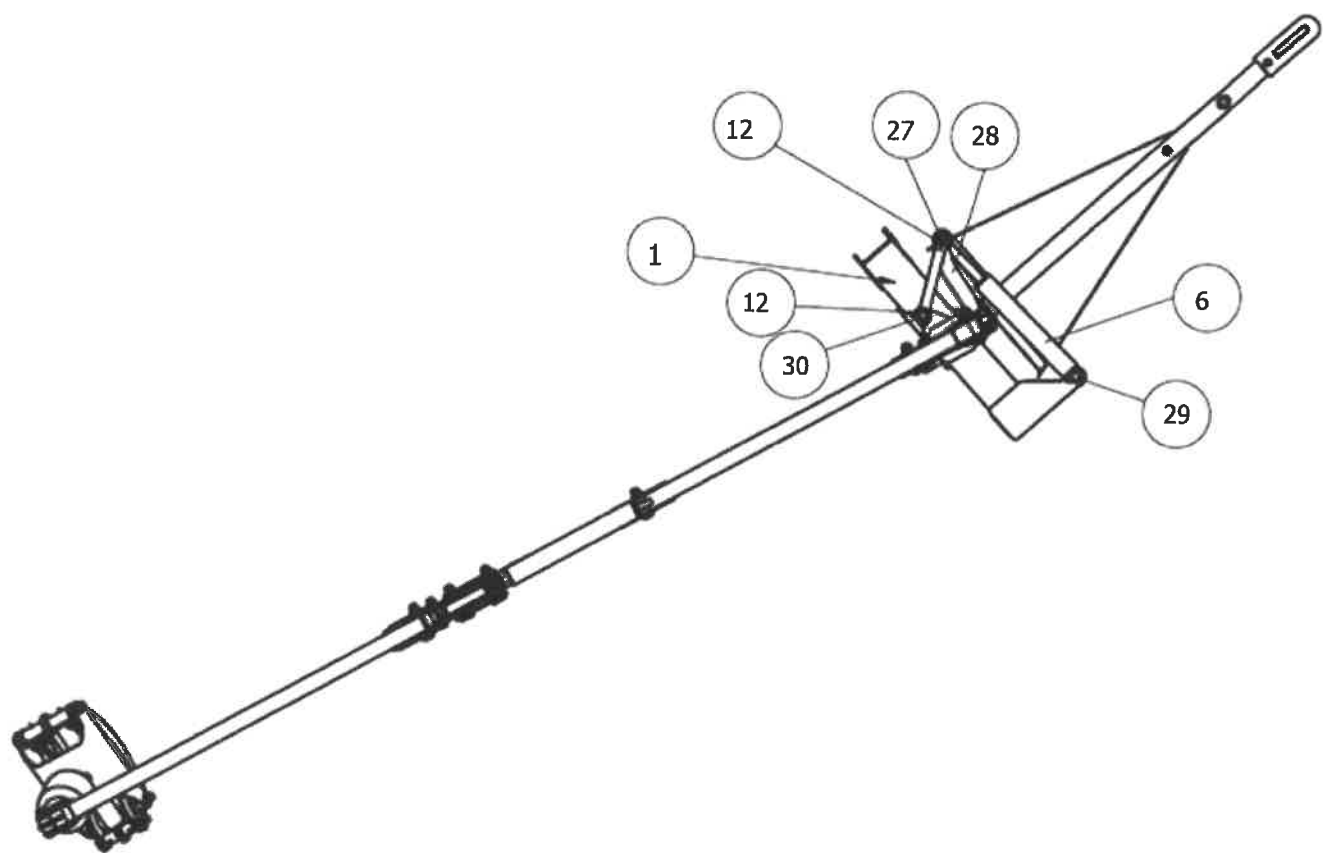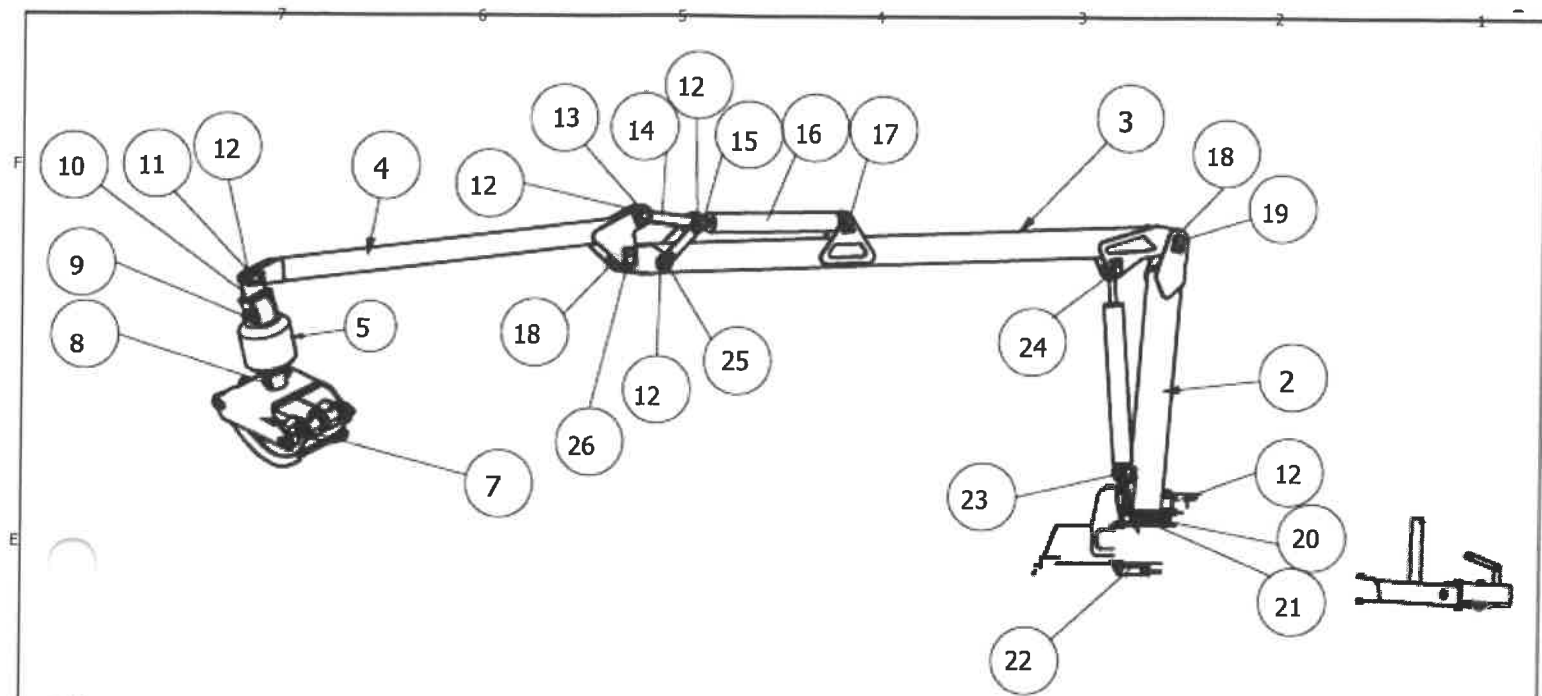

VARAOSANUMEROINTI		
MULTI METTE XLT 2		
nro	Nimitys	kpl
1	ETURUNKO	1
2	TYVIPALKKI	1
3	NOSTOPUOMI	1
4	TAITTO/JATKE-PUOMI	1
5	KÄÄNTÄJÄ	1
6	KÄÄNTÖSYLINTERI	1
7	KOURA	1
8	TAPPI + SOKKA	1
9	TAPPI	1
10	RIIPUKE	1
11	TAPPI	1
12	LIUKULAAKERI	
13	Tappi	1
14	VÄLITANKO	1
15	TAPPI	1
16	TAITTOSYLINTERI	1
17	TAPPI	1
18	LIUKULAAKERI	2
19	TAPPI	1
20	LIUKULAAKERILEVY	1
21	LIUKULAAKERI 60	1
22	LAAKERI	1
23	TAPPI	1
24	TAPPI	1
25	TAPPI	1
26	TAPPI	1
27	TAPPI	1
28	KÄÄNTÄJÄTANKO	1
29	TAPPI	1
30	TAPPI	1

>> Matti Räsänen
>> IHAN UUS OY
>> Siprintie 5
>> 80910 KULHO FINLAND
>> Tel. +358 400 542650
>> www.ihan-uus.net
>> e-mail: ihanuus@kolumbus.fi

>> Matti Räsänen
>> IHAN UUS OY
>> Siprintie 5
>> 80910 KULHO FINLAND
>> Tel. +358 400 542650
>> www.ihan-uus.net
>> e-mail: ihanuus@kolumbus.fi