



Operating Instructions Air-to-Water Heatpump



Model No.

Indoor Unit Outdoor Unit

WH-SDC03H3E5-1 WH-UD03HE5-1
WH-SDC05H3E5-1 WH-UD05HE5-1
WH-SDC07H3E5-1 WH-UD07HE5-1
WH-SDC09H3E5-1 WH-UD09HE5-1

WH-SDC12H6E5 WH-UD12HE5
WH-SDC16H6E5 WH-UD16HE5

WH-SDC09H3E8 WH-UD09HE8
WH-SDC12H9E8 WH-UD12HE8
WH-SDC16H9E8 WH-UD16HE8

WH-SQC09H3E8 WH-UQ09HE8
WH-SQC12H9E8 WH-UQ12HE8
WH-SQC16H9E8 WH-UQ16HE8

WH-SXC09H3E5 WH-UX09HE5
WH-SXC12H6E5 WH-UX12HE5

WH-SXC09H3E8 WH-UX09HE8
WH-SXC12H9E8 WH-UX12HE8
WH-SXC16H9E8 WH-UX16HE8



Manufactured by:
Panasonic AVC Networks Czech, s.r.o.
U Panasonicu 1, 320 84 Plzeň, Czech Republic

Operating Instructions Air-to-Water Heatpump	2-27	English (EN)
Betjeningsvejledning Luft-til-vand varmepumpe	28-53	Dansk (DA)
Instrucciones de funcionamiento Bomba de calor Aire-Agua	54-79	Español (ES)
Istruzioni operative Pompa di calore aria-acqua	80-105	Italiano (IT)
Gebruiksaanwijzing Lucht-naar-Water warmtepomp	106-131	Nederlands (NL)
Instrukcja obsługi Pompa ciepła powietrze-woda	132-157	Polski (PL)
Οδηγίες λειτουργίας Αντλία Θερμότητας Αέρος-Νερού	158-183	Ελληνικά (EL)
Návod k použití Tepelné čerpadlo vzduch/voda	184-209	Český (CZ)
Mode d'emploi Pompe à chaleur air-eau	210-235	Français (FR)
Bedienungsanleitung Luft/Wasser-Wärmepumpe	236-261	Deutsch (DE)
Kullanım Kılavuzu Hava-Su Isı Pompası	262-287	Türkçe (TR)
Bruksanvisning Luft-vatten-värmepump	288-313	Svenska (SV)
Bruksanvisninger Luft-til-vann varmepumpe	314-339	Norsk (NO)
Käyttöohjeet Ilma-vesilämpöpumppu	340-365	Suomi (FI)
Használati útmutató Levegő-víz hőszivattyú	366-391	Magyar (HU)
Navodila za uporabo Toplotna črpalka zrak-voda	392-417	Slovenščina (SL)
Upute za rad Toplinska pumpa zrak-voda	418-443	Hrvatski (HR)
Naudojimo instrukcijos Šildymo siurblys oras-vanduo	444-469	Lietuvių (LT)



ACXF55-29170

